



OLD STYLE AVANTI REMOTE CODING INSTRUCTIONS



Code Learning

*** MAKE SURE YOUR GARAGE DOOR IS CLOSED***

1. Open the white light cover on the Opener on the ceiling of your garage
 2. Quickly press and release the **RED LEARN BUTTON** – The LED light will flash slowly
 3. Select which button you wish to use on your remote and quickly press and release your **SELECTED REMOTE BUTTON** – The Led light will extinguish
 4. Quickly press and release your **SELECTED REMOTE BUTTON AGAIN** – The LED light will flash quickly
 5. On the next press of the remote the garage door will open.
- To code additional remotes, repeat steps 1-5

Code Deleting

1. Open the white light cover on the Opener on the ceiling of your garage
 2. Quickly press and release the **RED LEARN BUTTON** – The LED light will flash slowly
 3. Press and hold the **BLACK RUN BUTTON** – The LED light will flash quickly
 4. All remote codes will be deleted when the LED light stops flashing
- When codes have been deleted, refer to step 2 under **Code Learning** above to recode remotes.




Battery Replacement

Turn remote over and lever open the cover



Insert two CR2016 3V batteries with the writing on the battery facing down. Note: there is a silver lug which both batteries must sit in front of so they touch the circuit board

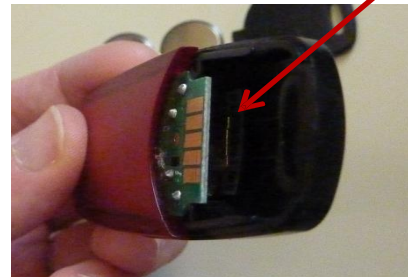

Replace cover and test remote. If there is a light when pressing the remote this indicates the battery is working. If there is no light then the battery is not inserted correctly.



If the garage door does not open then re-code the remote into the Opener in the garage as the codes may drop out when batteries have been changed or if there has been a power surge.